



whatsminer
M30S

**WhatsMiner M30S Operation
Guide
V1.1**



**Shenzhen MicroBT Electronics
Technology Co., Ltd**

Catalog

1. M30S Product Introduction.....	3
2. Whats Miner Connection and Racking Safety Notes.....	3
2.1. Miner Connection Notes.....	3
2.2 Power Supply Control Wire Connection Notes.....	4
2.3 Adaptor Board Control Wire Connection Notes.....	4
2.4 Fan Connection Notes.....	6
2.5 Hash Board and Adaptor Board Connection Notes.....	6
2.6 Power Supply Copper Busbar Connection Notes.....	8
2.7 Product Connection Check.....	9
2.8 Miner Handling and Racking Notes.....	9
3. Miner Configuration Environment Preparation.....	10
3.1. Miner Configuration Equipment List.....	10
3.2. Miner Network Environment.....	10
4. Miner Connection and Pre-Power Check.....	11
5. Miner Data Configuration (Configuration on the web page)	12
5.1. Query the dynamic IP address obtained by the miner.....	12
5.1.1. Run WhatsMinerTools software.....	12
5.1.2. Check the IP Address Reported by the Miner.....	12
5.2. Configuration Pool&Worker Data and NTP Server Address.....	14
5.2.1. Configuration Pool & Worker.....	14
5.2.2. Modify the NTP Synchronization Server Address (optional).....	17
5.3. Configuration the Static IP Address (optional).....	17
6. Miner Operation Status Check.....	19
7. Miner Batch Data Configuration, Miner Status Check, Firmware Upgrade.....	20
8. Miner Disassembly and Installation.....	21
8.1. Control Panel Disassembly and Installation.....	21
8.1.1. Control Panel Disassembly.....	21
8.1.2. Control Panel Installation.....	22
8.2. Power Supply Disassembly and Installation.....	24
8.2.1. Power Supply Disassembly.....	24
8.2.2. Power Supply Installation.....	25
8.3. Hash Board Disassembly and Installation.....	26
8.3.1. Hash Board Disassembly.....	26
8.3.2. Hash Board Installation.....	29

1. M30S Product Introduction



WhatsMiner M30S

Blockchain Server Artifact

Product Parameter Introduction as below:

HashRate: 88TH/s $\pm 5\%$

Power: 3344W $\pm 10\%$

Power Rate: 38W/T

Power Supply: P21-GB-12-3300-D-V01 (AC200~277V)

Environment Temperature: $-5^{\circ}\text{C} \sim 35^{\circ}\text{C}$

Product Size: 390mm*155mm*230mm

2. Whats Miner Connection and Racking Safety Notes

2.1. Miner Connection Notes


Check over the miner's power supply control wire, adaptor board control wire and fan control wire to make sure connections are correct. Damage of the control board, hash board, transfer board, fan, etc. caused by incorrect connection will not be covered by the warranty.

When connecting the wiring of the control board, ensure the pin connects to the corresponding socket. The pin cannot be inserted into the socket by force. If connected incorrectly, the power may burn out the control board, burning the signal wire!


2.2 Power Supply Control Wire Connection Notes

The power control wire is 14pin, and the card slot is inserted as below:

Correct Connection:

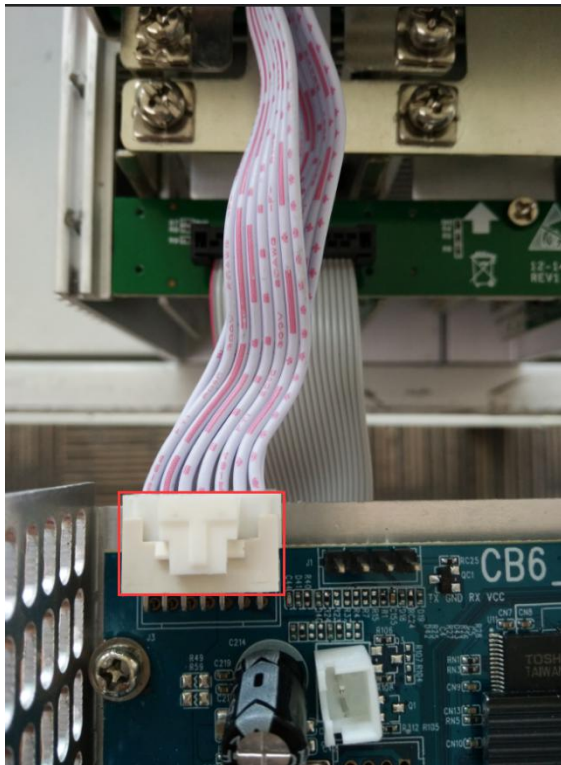


Incorrect Connection:

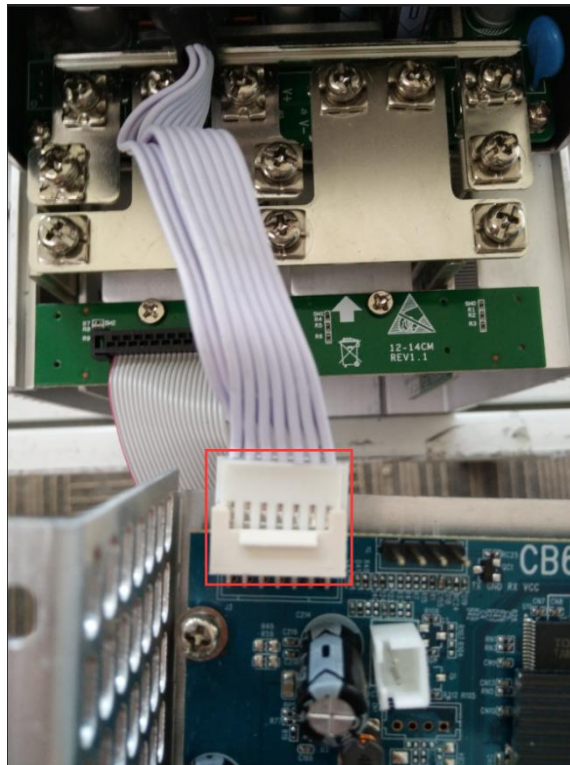


2.3 Adaptor Board Control Wire Connection Notes



The adaptor board control wire is 22pin, and the card slot is inserted as below:

Correct Connection:

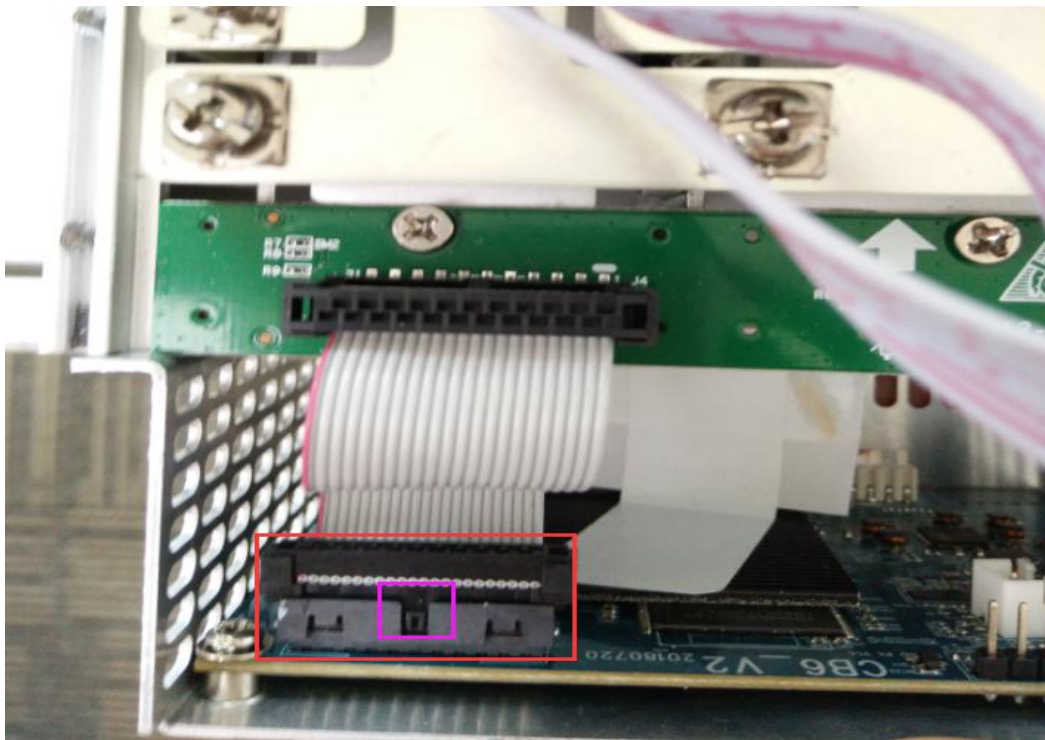

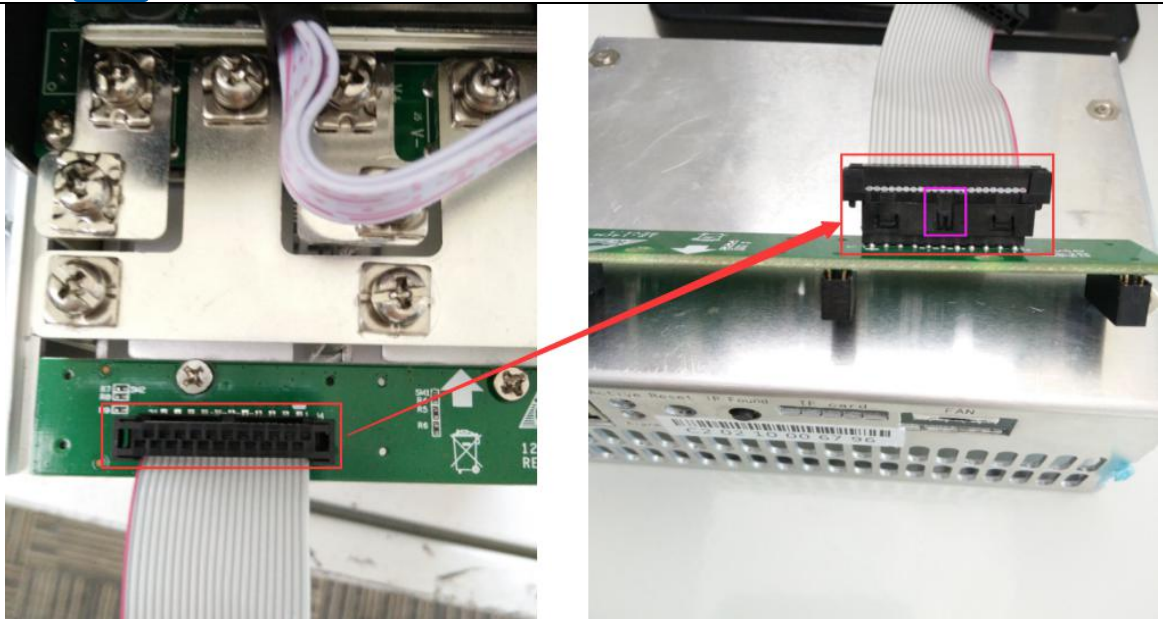


Incorrect Connection:

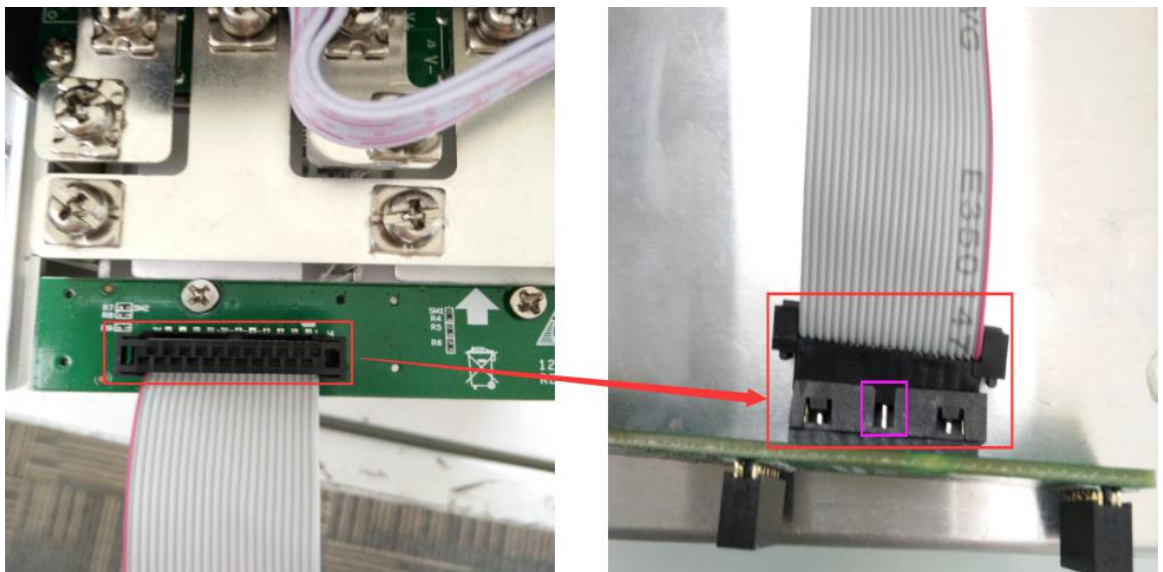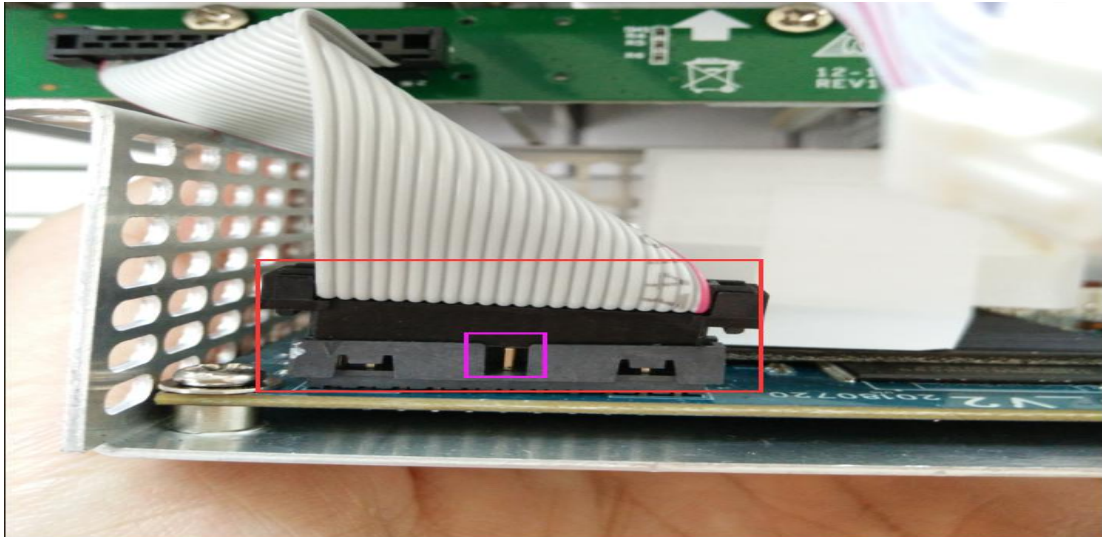


2.4 Fan Connection Notes

The fan wire is 6pin, and the card slot is inserted as below:

Correct Connection:

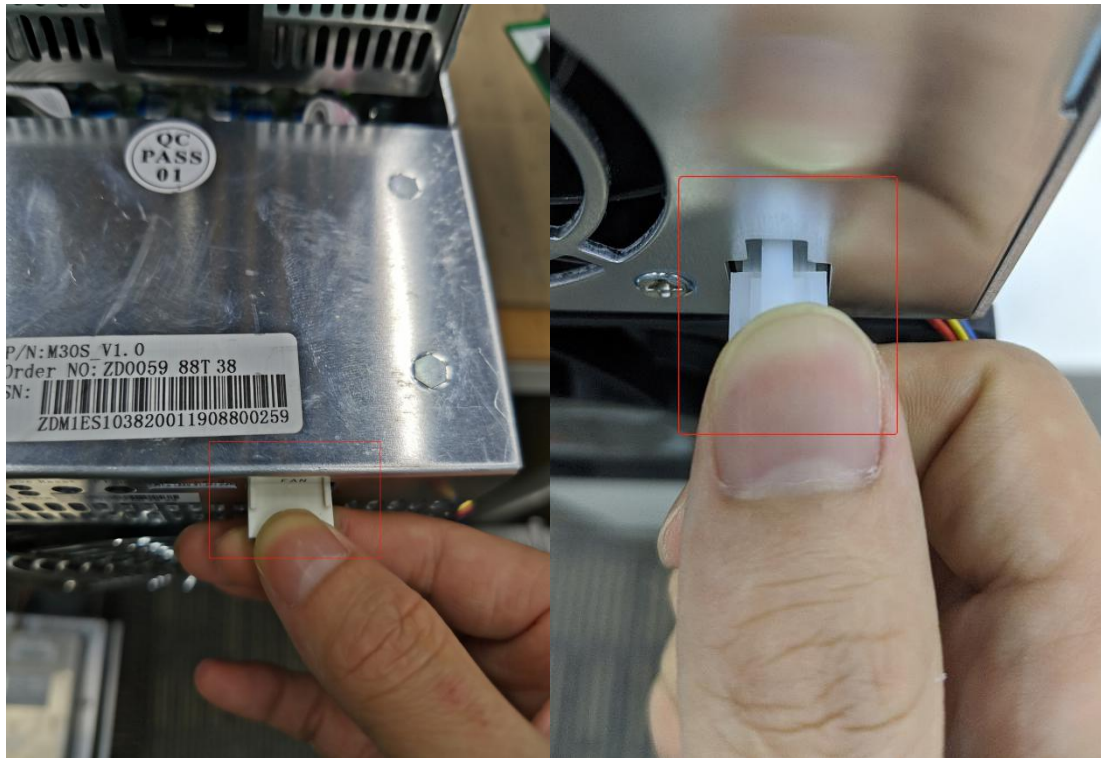


Incorrect Connection:

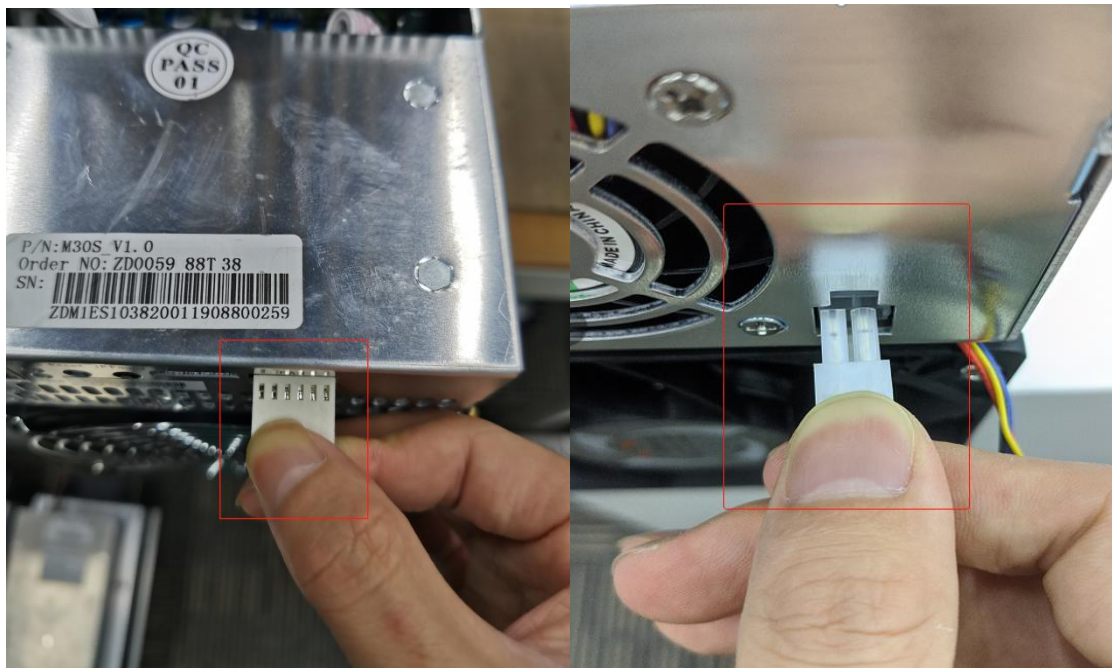


2.5 Hash Board and adaptor Board Connection Notes

The socket of the adaptor board and the pin of the hash board must be installed in place to avoid other problems caused by contact issues!

Correct Connection:

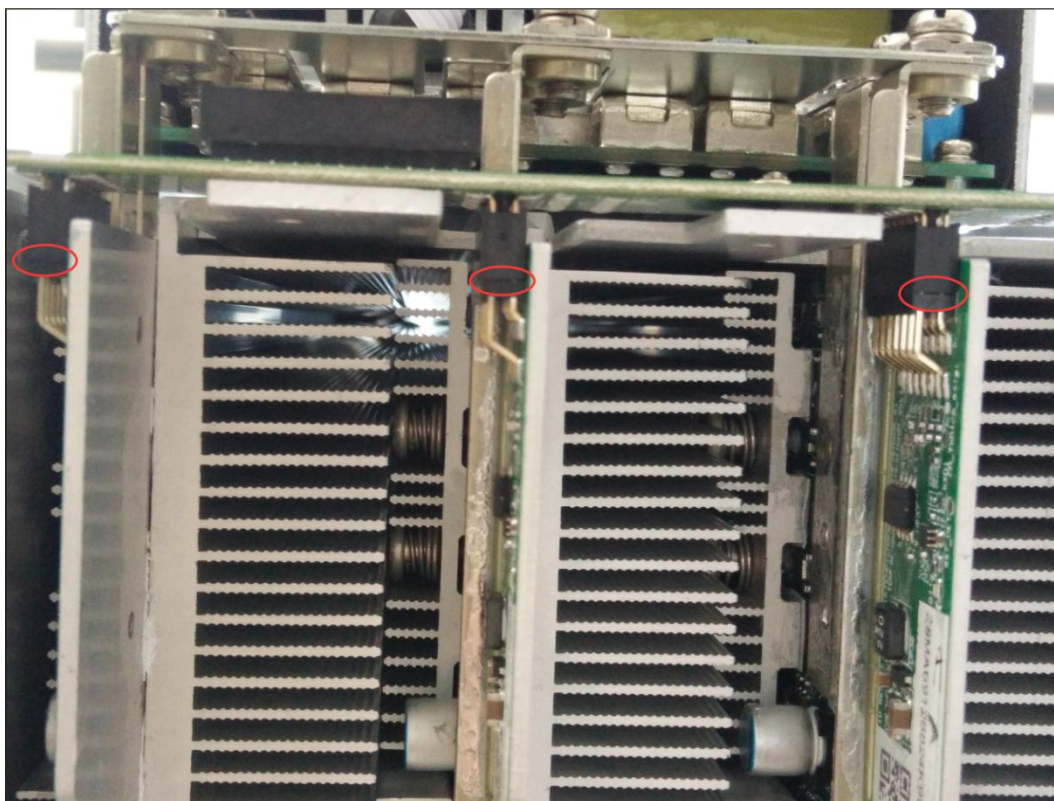


Incorrect Connection:

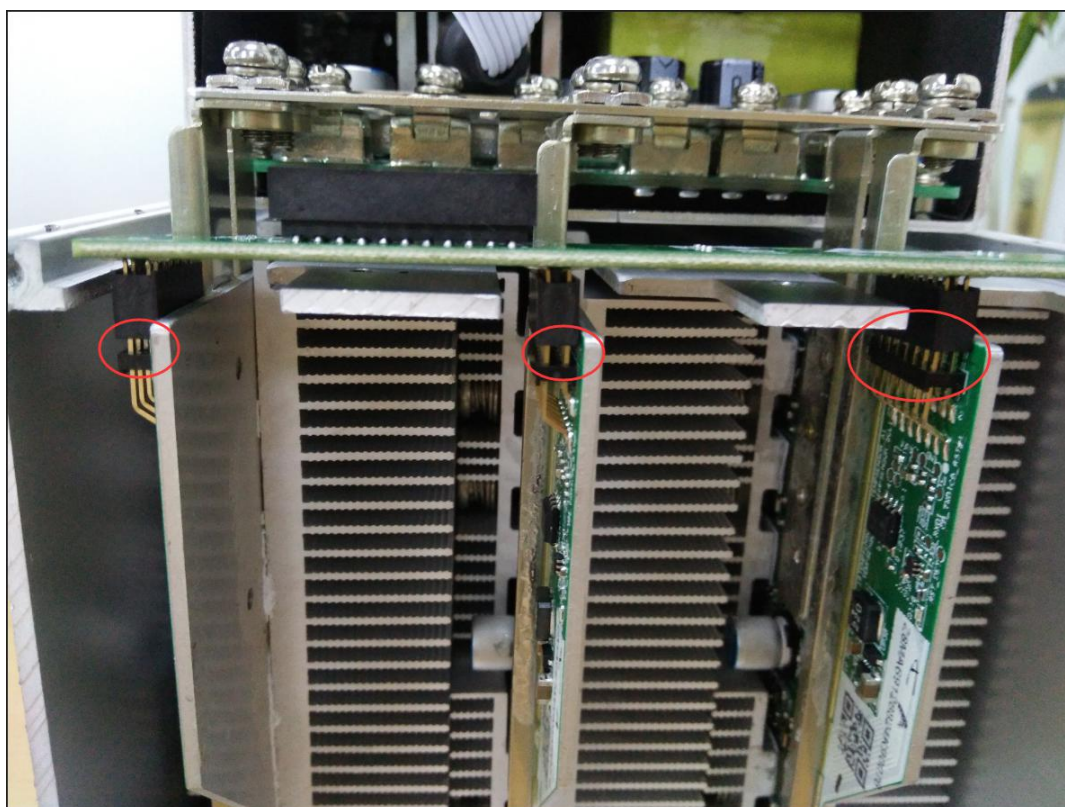


2.6 Power Supply Copper Busbar Connection Notes

When the power supply copper busbar is connected to the hash board, the positive and negative poles of the copper busbar cannot be connected incorrectly, and the screw washers of the fixed copper bar must be aligned in parallel with the edge of the copper bar. Otherwise, the machine may short-circuit when the power is turned on. Screws must be fastened. Fasten screws to avoid issues related to poor contact with the copper bar!

Correct Connection:

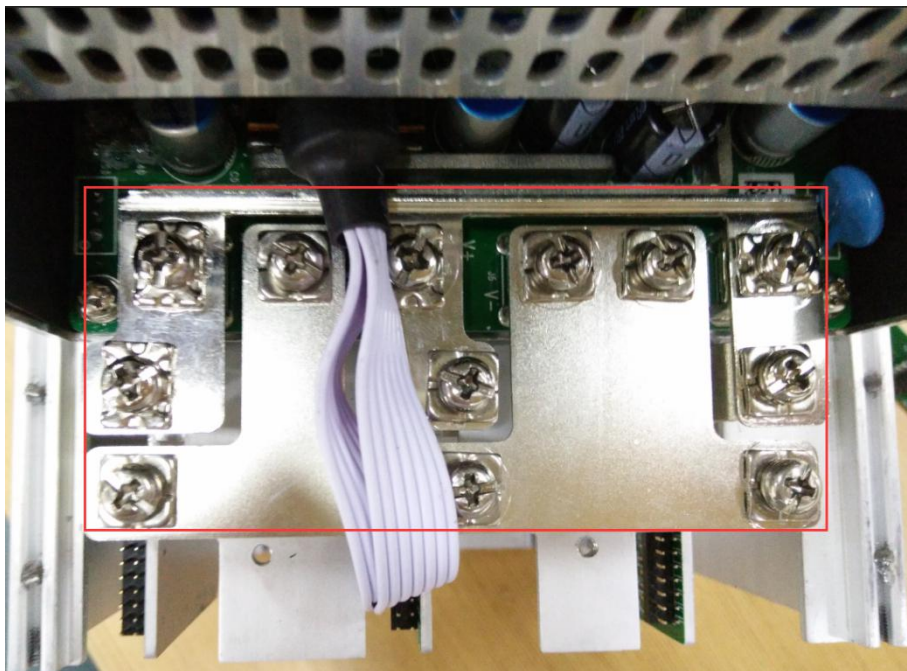

Incorrect Connection:

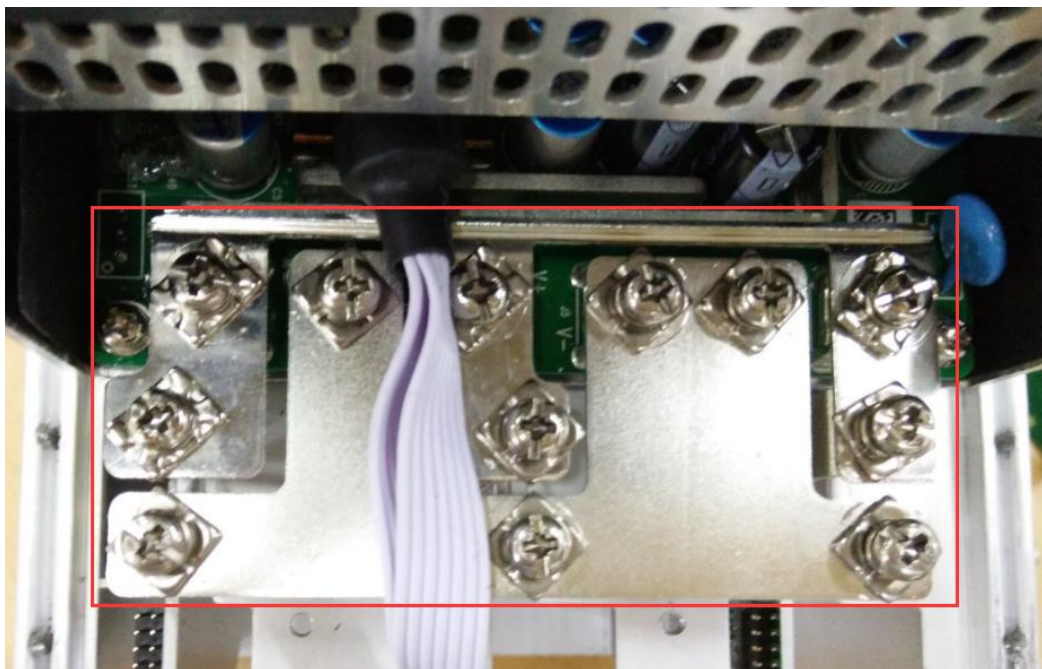

2.7 Product Connection Check

After all connections of the miner are connected and screws are tightened, check again to confirm that the connection is correct.

2.8 Miner Handling and Racking Notes

In the process of moving and putting the mining machine on the shelf, install the power port first, and then connect the power cord socket end. It is strictly forbidden to use the data cable, power control line, and fan cable as the load-bearing handle of the mining machine, and lift the mining machine and power supply. Lifting the miner and the power supply through the connection will cause the connection to be damaged, the connection to be loose, and the control board will exceed its capacity and be physically damaged. The resulting hardware damage and malfunctions will not be covered by the warranty!




3. Miner Configuration Environment

Preparation

3.1. Miner Configuration Equipment List

#	Tool	Numb	Use	Remark
1	Computer	1pc	Miner configuration	
2	Miner Power Supply	1pc	Power the miner	
3	Switch	1pc	Configuring miner and configuration computer network communication	The switch can connect to the Internet.
4	DHCP/NTP Server/Router	1pc	1、 Provide a dynamic IP address for the initial power up of the miner 2、 Provide NTP network time for miner	It defaults to DHCP to obtain a dynamic IP address when the miner leaves the factory.

3.2. Miner Network Environment

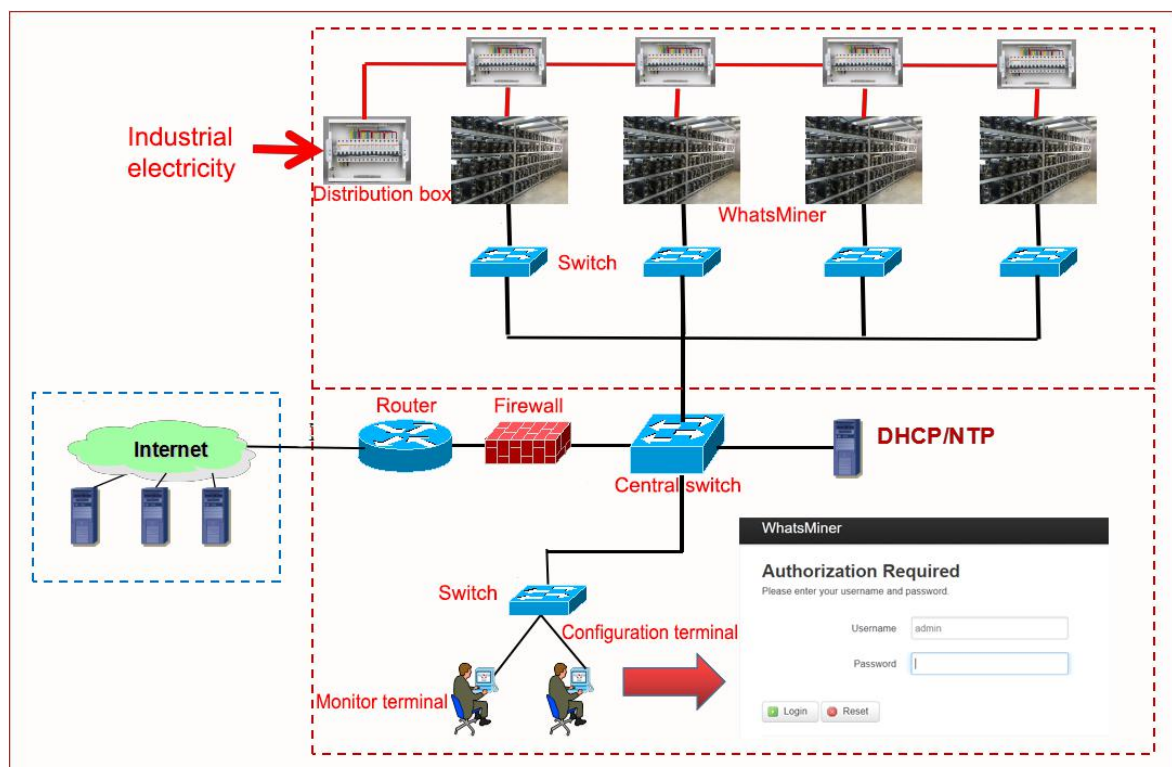

The miner defaults to DHCP to obtain dynamic IP. Therefore, the mine network must be configured with a DHCP server, or the router can enable DHCP to dynamically allocate the IP address service. The running time of the miner, the correctness of the calculation statistics, etc. depend on the network NTP time. The mining machine itself is configured with multiple NTP server addresses of the public network by default. In order to speed up the acquisition of network time and improve the time precision, it is recommended to mine the network. Configure a local NTP server.

4. Miner Connection and Pre-Power Check

(1) Before the wiring and power-on of the machine, according to the warning signs on the side of the machine, shake the machine to check whether there is a radiator or other components loose. This is to ensure that there is no radiator or other components that may fall off before wiring and power-on.

(2) The machine is connected to the power wiring, and the network port is connected to the switch. Check the power control wiring, fan control wiring, adaptor board control wiring, and ensure that the fan control wiring is not loose, and the copper line is connected correctly before powering on the machine.

Notes:

(1) When the power copper busbar is connected to the hash board, the positive and negative poles of the copper busbar are connected correctly, and the screw washers of the fixed copper bar are aligned parallel to the edge of the copper bar, the fixed screws must be tightened. Otherwise the power board may burn out. For the control board and power supply, hardware damage caused by copper stripping is not covered by the warranty.

(2) The power control wiring between the control board and the power supply must be connected. Otherwise, the power supply voltage output may not be controlled, resulting in low power calculation.


(3) The control board must be connected to the fan wiring securely. If the fan wiring is disconnected or the connection is poor, the miner may not be able to cool down, the power board throttled, and the power reduced.

5. Miner Data Configuration (Configuration on the web page)

5.1. Query the dynamic IP address obtained by the miner


5.1.1. Run WhatsMinerTools software

Miner Data Configuration: Connect PC to **the same network** the machine is located, run WhatsMinerTools software on the PC, select the "Detect IP" tab, set the room number, rack number and layer number of the rack where the mining machine is located, the location number of the layer, click "Start".

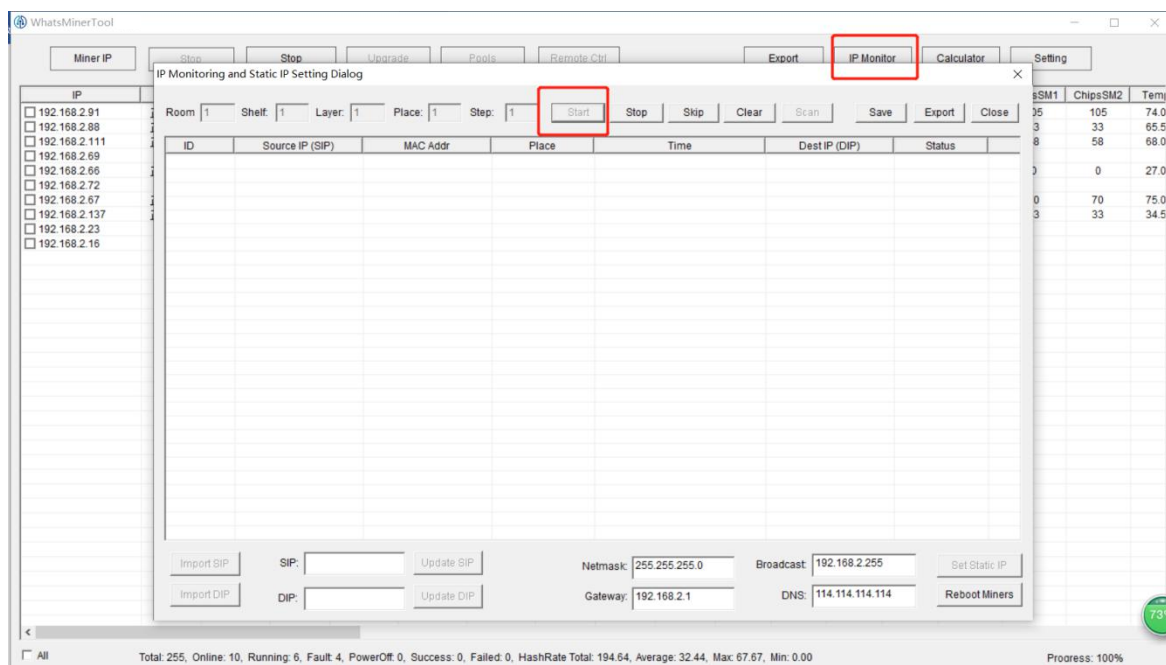


5.1.2. Check the IP Address Reported by the Miner

(1) After the machine is powered on for about 30s, under normal circumstances, the yellow light of the network port is always on and the green light is blinking. Press the IPFOUND function button (long button highlighted) on the miner control panel for more than 5s, the two LEDs on the right will flash a few times, indicating that the machine has broadcast the IP and MAC address of the unit to the network.

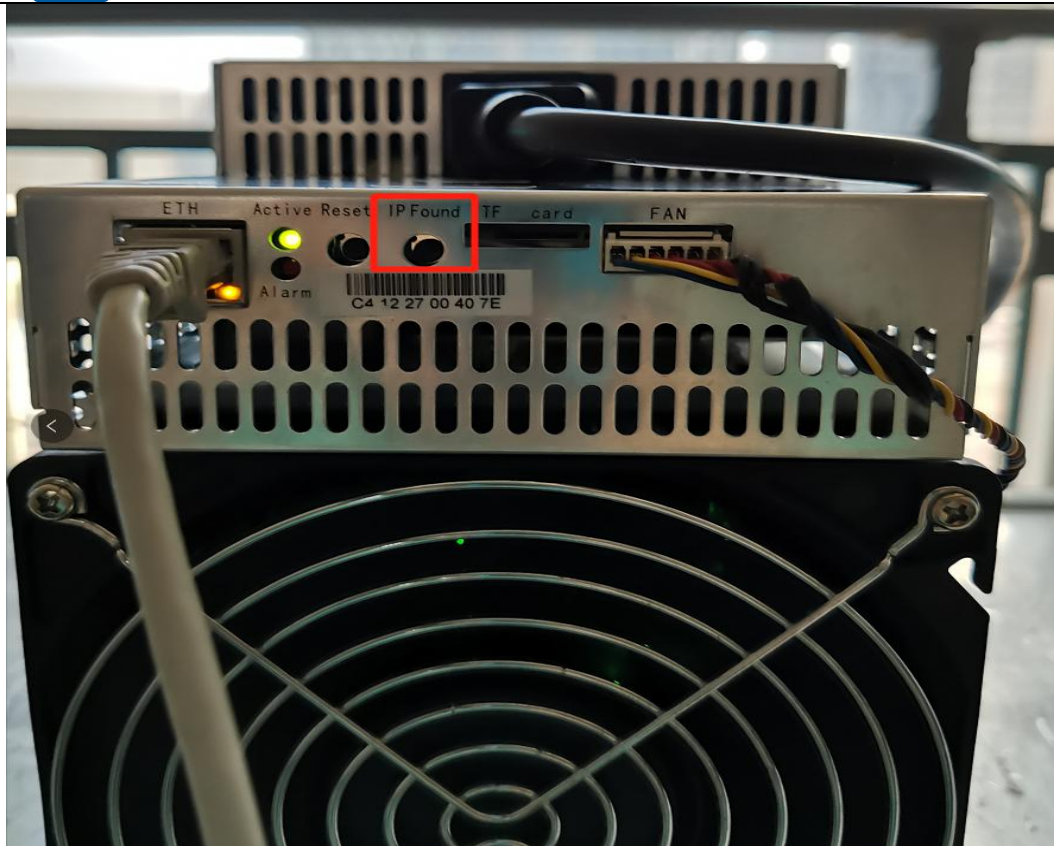

(2) View the dynamically obtained IP, MAC address, and miner position reported by the machine in WhatsMinerTools software.

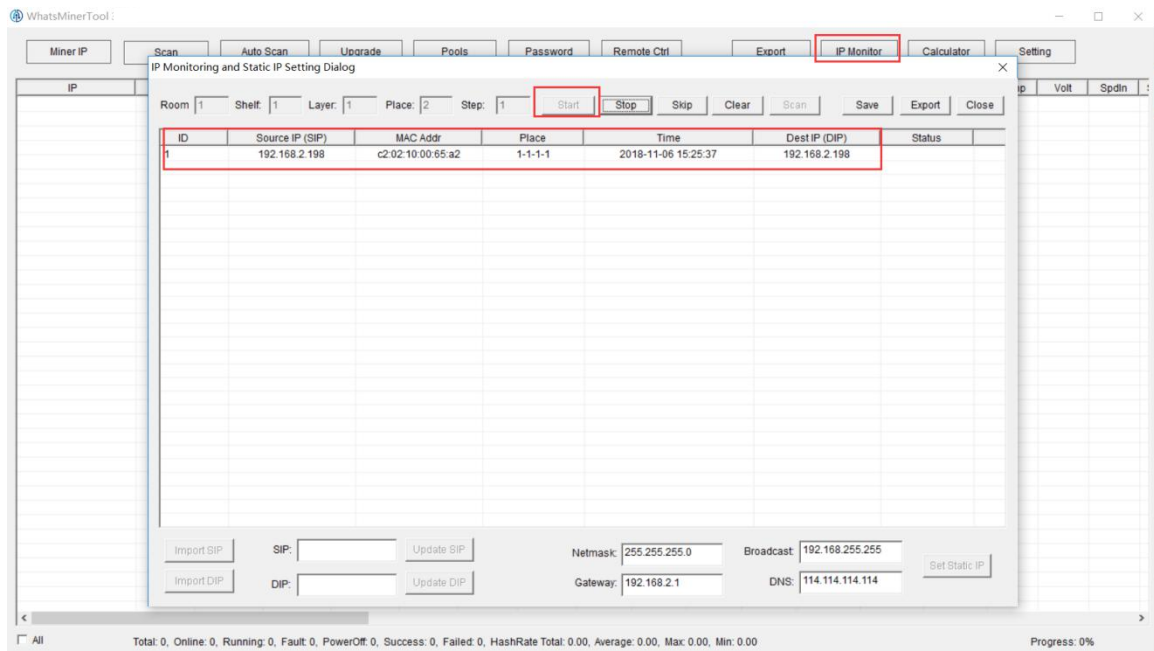

Notes:

- (1) If all the lights on the panel of the machine control panel are not lit after power-on, please check whether the power supply of the 220V power cable and the 16A power cable are reliable and the connection is correct.
- (2) If the indicator on the right side of the panel of the machine control panel is

on, but the network port is not lit, or the green light is not flashing, check whether the switch is normal, the whether network cable connection is reliable.

- (3) The computer and miner running the WhatsMinerTools software must be on the same network segment. Otherwise, the software may not receive the broadcast message from the machine, so the IP Address and MAC Address information reported by the machine IPFOUND button cannot be queried.
- (4) If the computer and the miner machine are on the same network segment, and the DHCP service is enabled in the network, after the mining machine IPFOUND button is pressed, and WhatsMinerTools software does not query the IP of the machine, long press the reset button on the machine panel for more than 5s to recover Factory default configuration, then power off the miner machine. Power on to restart, power on for 30s and then press the IPFOUND button to detect the miner IP address.
- (5) If the computer is running WhatsMinerTools software, and after clicking "Start", without manually pressing the IPFOUND button, the software automatically finds the IP Address and MAC address of the machine, the IPFOUND button of the miner may be stuck by the panel. Find the software. Display the miner corresponding to the MAC address (the MAC address bar code is attached to the miner panel), power off the corresponding miner, and then re-install the control board to ensure that the control panel buttons and indicators are exposed to the mounting holes, and are not stuck.

5.2. Configuration Pool&Worker Data and NTP Server Address

5.2.1. Configuration Pool & Worker

- (1) After logging in, go to the Configuration - CGMiner Configuration page.
- (2) In the Configuration - CGMiner Configuration page, modify the mine pool address, mine worker name, and after modifying click "Save & Apply" in the lower right corner to save the modified configuration.

Configuration

Please visit www.microbt.com/support.html for support.

Coin Type
BTC

Pool 1
stratum+tcp://btc-vip-3dcoa7jxu:

Pool1 worker
microbtinit

Pool1 password
1234

Pool 2
stratum+tcp://stratum.bixin.com:

Pool2 worker
microbtinit

Pool2 password
1234

Pool 3
stratum+tcp://stratum.f2pool.com:

Pool3 worker
microbtinit

Pool3 password
1234

After the configuration of the mining pool is modified, the modified configuration must be restarted after the CGMiner program is restarted or the control panel is restarted.

(3) Restart CGMiner to check whether the configuration modification takes effect.

In the miner interface, select: Status - "CGMinerStatus" to enter the CGMiner running status interface.

WhatsMiner

Status ▾

System ▾

Configuration ▾

Logout

CGMiner Status

CGMiner API Log

System Log

Miner Log

Processes

Overview


CGMiner Status

Please visit <https://www.microbt.com>

Summary

Elapsed	GHSave	Accepted	Rejected	FanSpeedIn	FanSpeedOut	Voltage	Power	Work Mode
7m 10s	89240.73	126	1	5,280	5,250	1,156	3,456	Normal

In the CGMiner Status interface, click "Restart CGMiner" to restart the CGMiner process.

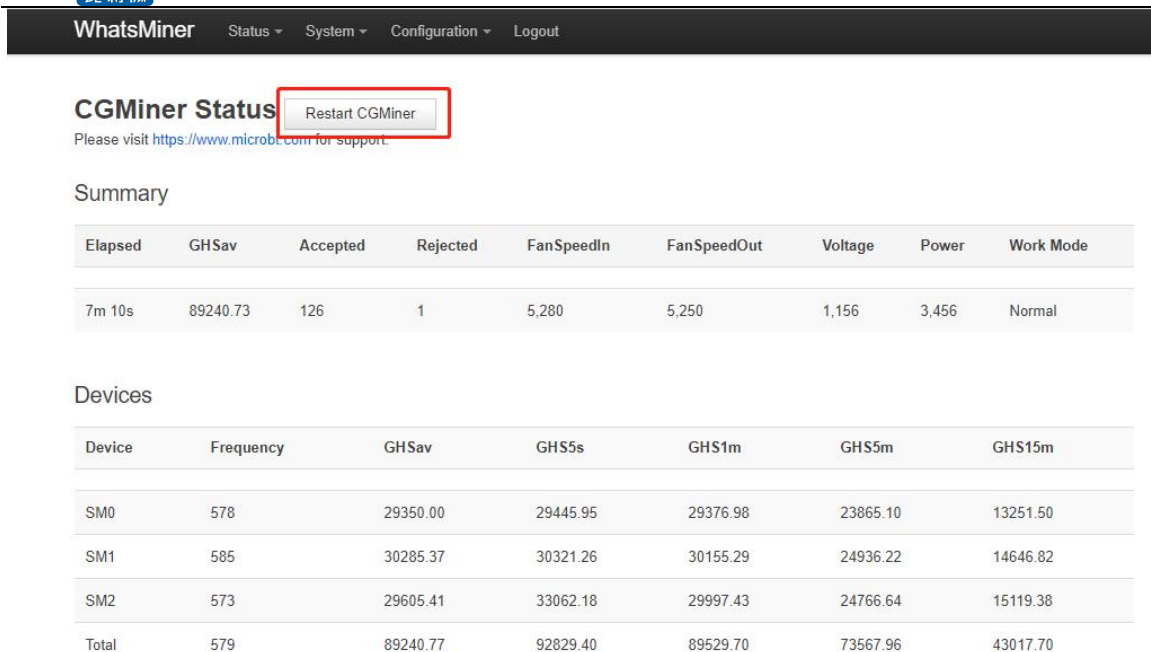

WhatsMiner Status System Configuration Logout

CGMiner Status

Please visit <https://www.microbt.com> for support.

[Restart CGMiner](#)

Summary


Elapsed	GHSav	Accepted	Rejected	FanSpeedIn	FanSpeedOut	Voltage	Power	Work Mode
7m 10s	89240.73	126	1	5,280	5,250	1,156	3,456	Normal

Devices

Device	Frequency	GHSav	GHS5s	GHS1m	GHS5m	GHS15m
SM0	578	29350.00	29445.95	29376.98	23865.10	13251.50
SM1	585	30285.37	30321.26	30155.29	24936.22	14646.82
SM2	573	29605.41	33062.18	29997.43	24766.64	15119.38
Total	579	89240.77	92829.40	89529.70	73567.96	43017.70

(4) Restart the control board and check whether the configuration modification takes effect. (If you do not choose to restart CGMiner, after the configuration is modified and saved, you can also restart the control board to make the configuration take effect.)

In the System interface, click "Reboot".

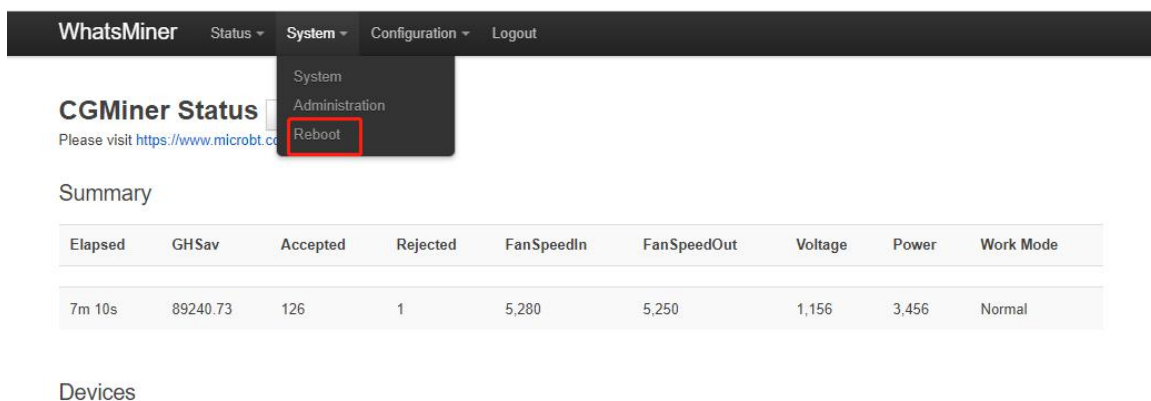

WhatsMiner Status System Configuration Logout

System
Administration
Reboot

CGMiner Status


Please visit <https://www.microbt.com> for support.

Summary

Elapsed	GHSav	Accepted	Rejected	FanSpeedIn	FanSpeedOut	Voltage	Power	Work Mode
7m 10s	89240.73	126	1	5,280	5,250	1,156	3,456	Normal

Devices

In the Restart interface, click "Perform reboot" to confirm the restart.

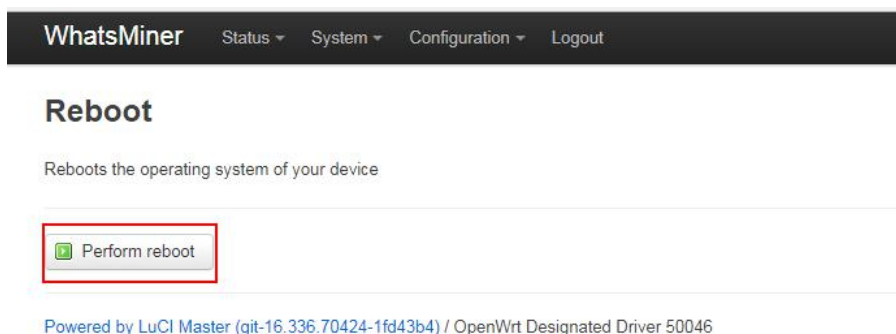

WhatsMiner Status System Configuration Logout

Reboot

Reboots the operating system of your device


[Perform reboot](#)

Powered by LuCI Master (git-16.336.70424-1fd43b4) / OpenWrt Designated Driver 50046

After restarting for about 30s, the machine system will automatically jump to the

5.2.2. Modify the NTP Synchronization Server Address (optional)

(1) After logging in, select System - System Configuration in the interface to enter the CGMiner configuration page.

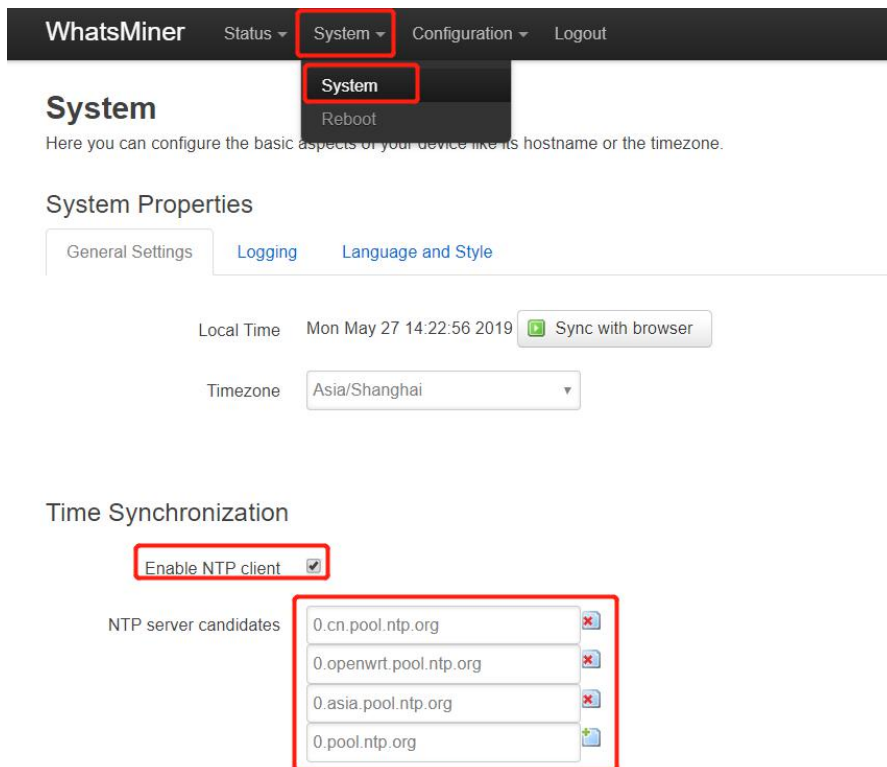

(2) In the CGMiner configuration interface, add or modify the NTP server address. The miner has been configured with four NTP server addresses by default. You can modify or add the NTP server address to the local NTP server address according to the mine situation.

(3) After modifying the NTP server address, click "Save & Apply" in the lower right corner.

5.3. Configuration the Static IP Address (optional)

Modify the IP address obtained by the mining machine DHCP to the static IP address of the mine operation network planning.

(1) Enter the machine dynamic IP in the browser and log in to the mine interface with the admin user and the default password admin.

(2) After logging in to the machine, in the miner interface, select: Configuration->Interfaces to enter the network interface configuration interface.

WhatsMiner Status System **Configuration** Logout AUTO REFRESH ON

LAN

Interfaces

CGMiner
Configuration

Interfaces

Interface Overview

Network	Status	Actions
<div>LAN</div> <div>eth0</div>	Uptime: 7d 18h 21m 43s MAC-Address: C2:08:18:00:00:9C RX: 5.16 GB (85397972 Pkts.) TX: 161.64 MB (482107 Pkts.) IPv4: 192.168.35.10/24	<div>Edit</div>

[Save & Apply](#)

(3) In the "Configuration" interface, click "Edit".

WhatsMiner Status System Configuration Logout AUTO REFRESH ON

LAN

Interfaces

Interface Overview

Network	Status	Actions
<div>LAN</div> <div>eth0</div>	Uptime: 7d 18h 23m 8s MAC-Address: C2:08:18:00:00:9C RX: 5.16 GB (85408642 Pkts.) TX: 161.67 MB (482297 Pkts.) IPv4: 192.168.35.10/24	<div>Edit</div>

[Save & Apply](#)

(4) In the interface modification page, select "Static address" for the protocol and click "Switch protocol".

WhatsMiner Status System Configuration Logout AUTO REFRESH ON


LAN

Interfaces - LAN

On this page you can configure the network interfaces. You can bridge several interfaces by ticking the "bridge interfaces" field and enter the names of several network interfaces separated by spaces. You can also use VLAN notation INTERFACE.VLANID (e.g.: eth0.1).

Common Configuration

General Setup


Status  Uptime: 7d 18h 24m 13s
MAC-Address: C2:08:18:00:00:9C
RX: 5.16 GB (85417289 Pkts.)
TX: 161.73 MB (482497 Pkts.)
IPv4: 192.168.35.10/24

Protocol: Static address

Really switch protocol? [Switch protocol](#)

[Back to Overview](#) [Save & Apply](#)

(5) In the static address configuration interface, change the IP address, mask, gateway, broadcast address, and DNS address to the actual planned address of the mine. After editing, click "Save & Apply" in the lower right corner.

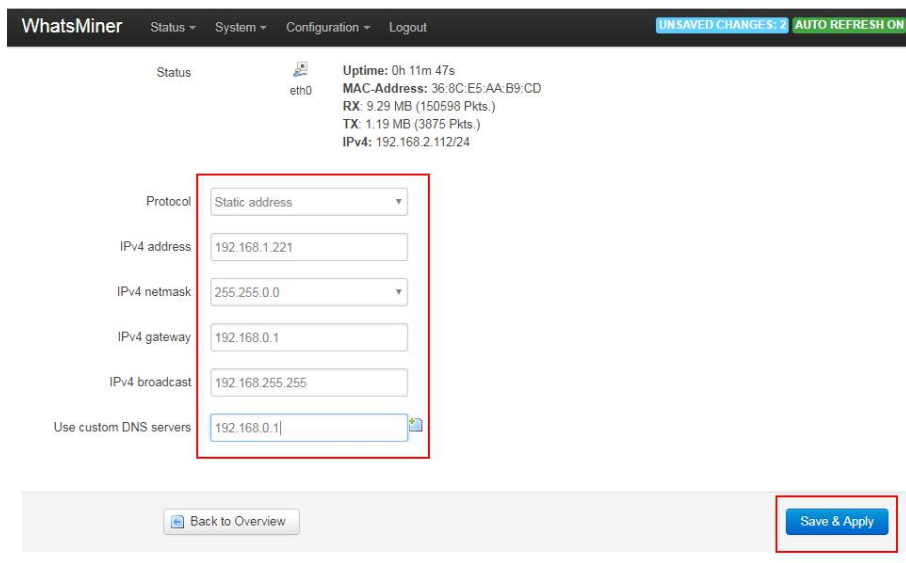

After saving the application, you need to re-use the newly set static IP address to log in to the mining machine (otherwise the page will display as loading until the loading fails).

6. Miner Operation Status Check

After the mine is connected to the operation network, log in to the machine and check the running status of the machine.

(1) In the miner interface, select: Status->CGMiner Status to enter the CGMiner running status interface.

(2) View the overall calculation of the mining machine, front and rear fan speed, connection to the mining pool, single board computing power, board temperature and other operating conditions.

Summary

Elapsed	GHSav	Accepted	Rejected	FanSpeedIn	FanSpeedOut	Voltage	Power	Work Mode
7m 10s	89240.73	126	1	5,280	5,250	1,156	3,456	Normal

Devices

Device	Frequency	GHSav	GHS5s	GHS1m	GHS5m	GHS15m
SM0	578	29350.00	29445.95	29376.98	23865.10	13251.50
SM1	585	30285.37	30321.26	30155.29	24936.22	14646.82
SM2	573	29605.41	33062.18	29997.43	24766.64	15119.38
Total	579	89240.77	92829.40	89529.70	73567.96	43017.70

Pool	URL	Active	User	Status	Difficulty	GetWorks	Accepted	Rejected	Stale	LST	LSD
0	stratum+tcp://btc-vip-3dcoa7jxu.ss.poolin.com:443	true	microbtinit	Alive	131072	41	162	0	0	Tue May 28 10:40:33 2019	131072

Notes:

- (1) The mining machine is connected correctly. When the network is normal, the mining machine will automatically perform the frequency search test after power-on. The search frequency test phase takes about 15 minutes. After the search frequency is over, it will enter the formal mining stage. It is the computing power of normal operation. If the search frequency is not over yet, the mining power will be lower than the normal operation.
- (2) If the temperature of the air outlet of the power board is higher than 85 degrees and the fan speed is above 6100 rpm, the mining machine will run at a reduced frequency, and the power will be lower than the normal operation. It is necessary to do a good job of ventilation and cooling measures in the operating environment of the mining machine to ensure that the ambient temperature of the mining machine is below 40.
- (3) If the fan wiring is not reliably connected to the control board, the corresponding fan speed in the miner interface is 0, which leads to the mining machine overheating. When the temperature is too high, the power board is reduced, and the computing power is reduced.
- (4) If the power board temperature is not detected in the status interface, the miner machine needs to be powered off, and the power cable and data cable of the corresponding power board re-plugged and connected (one end of the control board and one end of the hash board) to ensure a reliable connection.

7. Miner Batch Data Configuration, Miner Status

Check, Firmware Upgrade


You can use the WhatsMinerTool software to carry out batch data configuration, status check and firmware upgrade of the mining machine. For details, please refer to the "Whats Miner WhatsMinerTool Operation Guide".

8. Miner Disassembly and Installation


8.1. Control Panel Disassembly and Installation

8.1.1. Control Panel Disassembly


1) Unplug the fan cable on the control panel before removing the control board, and then remove the four screws fixed on the chassis.

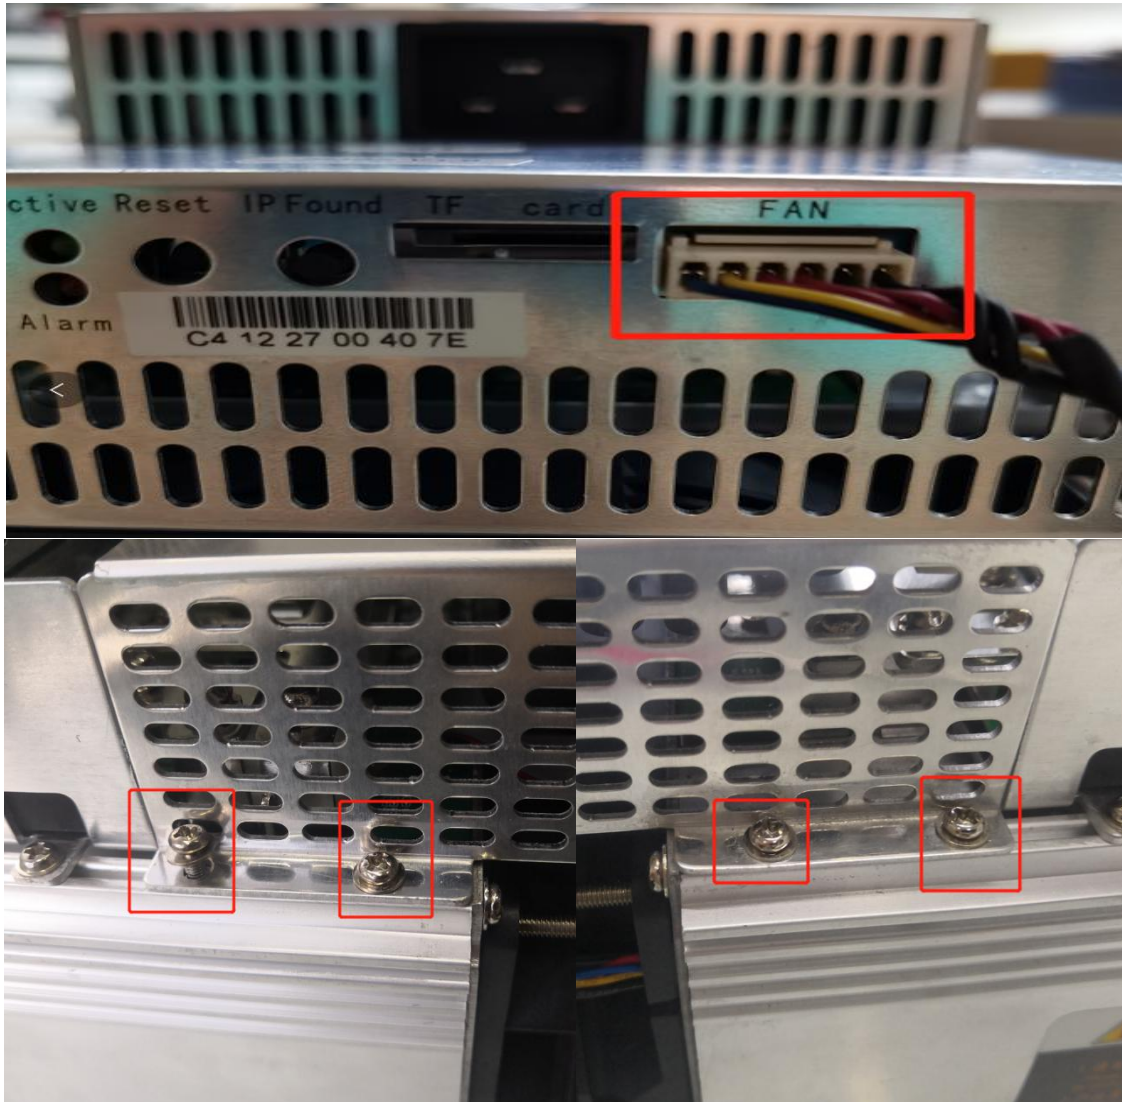

2) Unplug the power control cable and the adaptor board control cable connected to the control panel as shown:

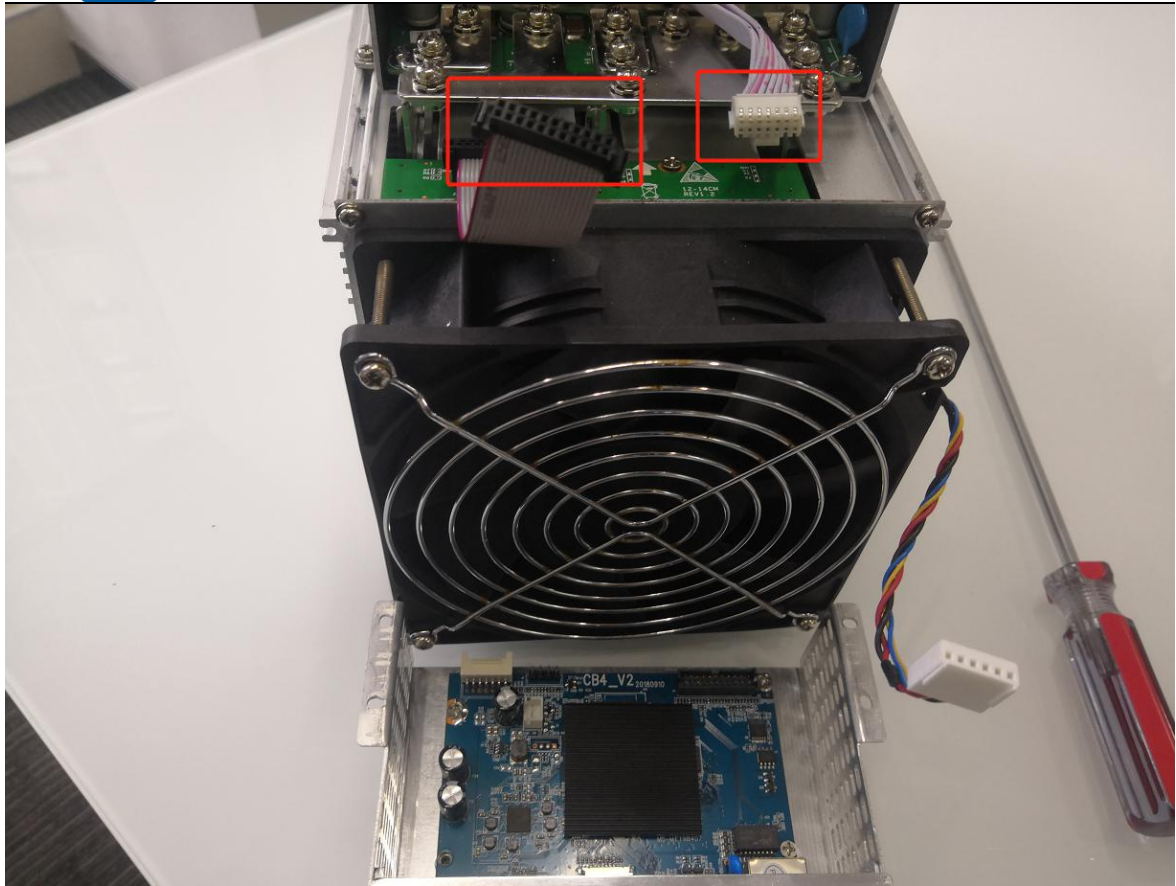


3) Remove the four screws fixed on the bracket and take out the control panel from the bracket as shown:

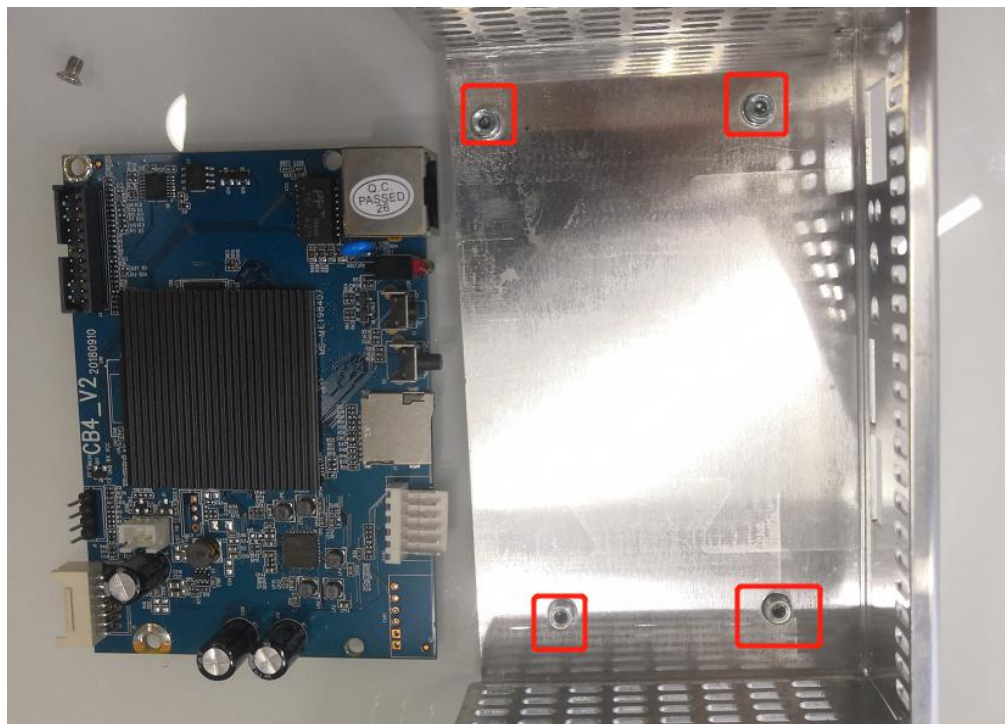


8.1.2. Control Panel Installation

1) When installing the control board, first fix the 4 screws on the control board bracket,

as shown in the figure:

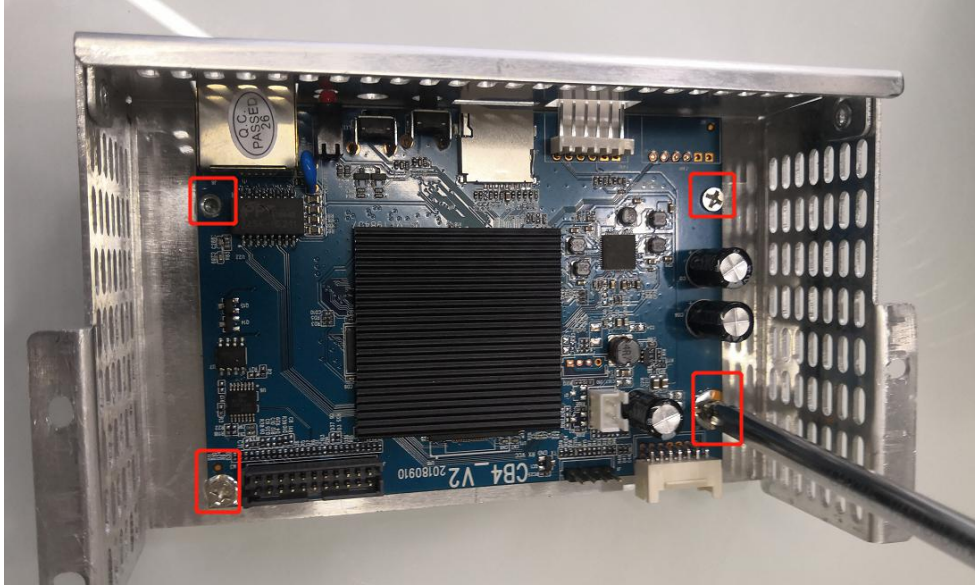


- 2) Insert the power control cable and the adaptor board control cable into the corresponding slots on the control board, and then fix the bracket to the chassis with screws, as shown in the figure:
- 3) Plug the fan cable and the control board is installed.

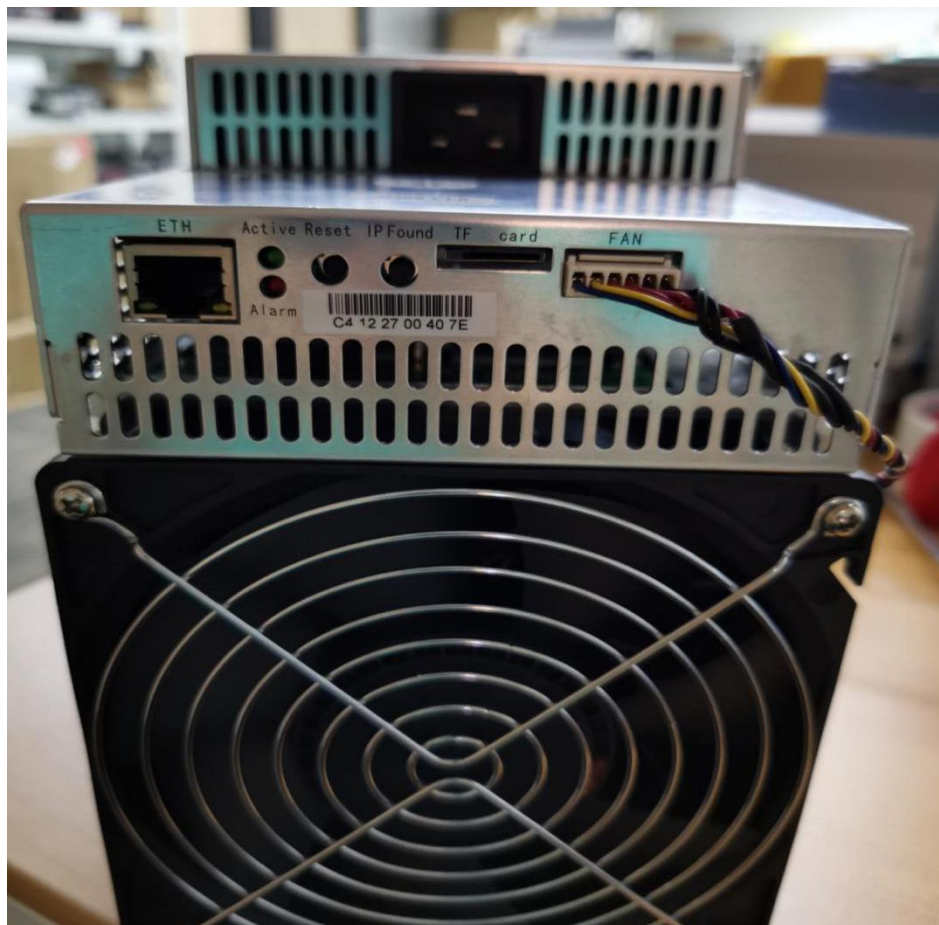


8.2. Power Supply Disassembly and Installation

8.2.1. Power Supply Disassembly

1) Remove the four screws that secure the power supply on the chassis, then remove the six screws that secure the copper bars on the power supply. Unplug the fan cable on the power supply.

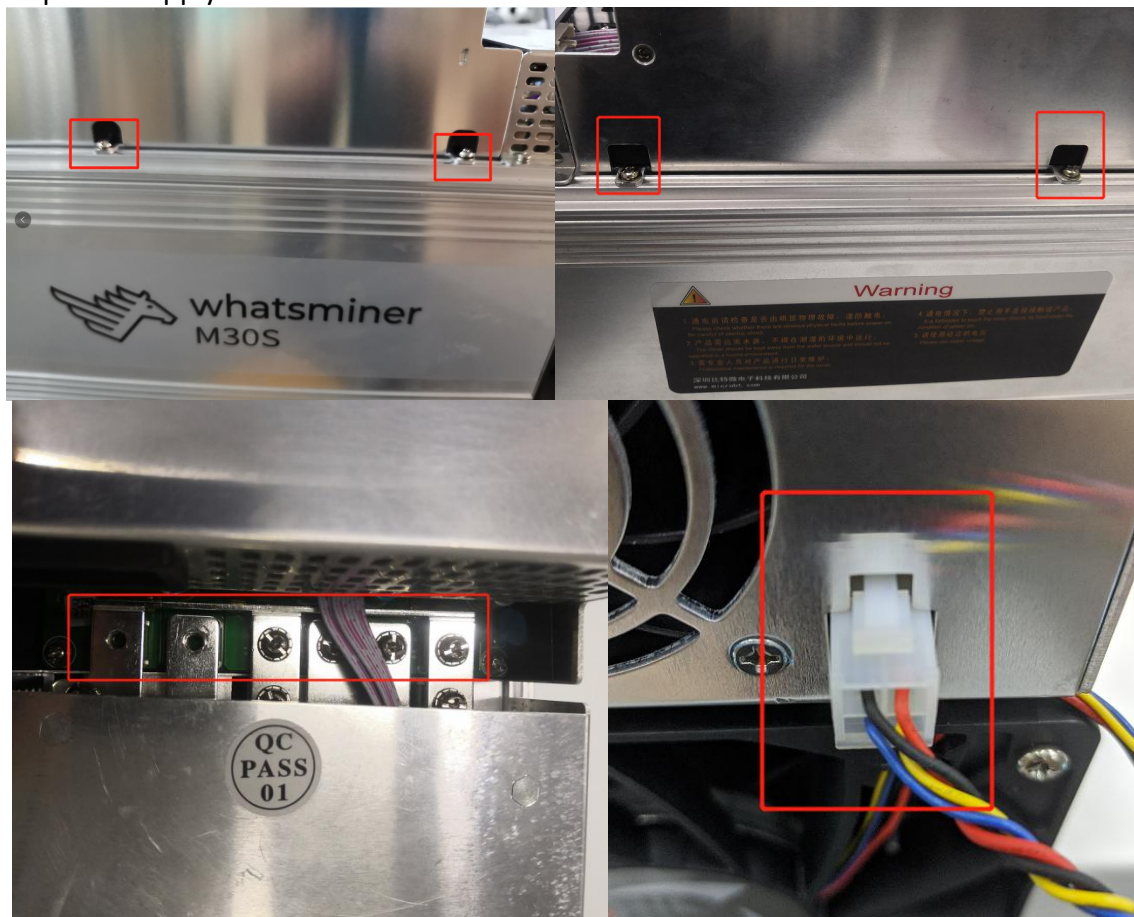

2) After the above operation is completed, gently pull out the power supply (do not pull out too long, the power control cable is still connected to the control panel), as shown in the figure:

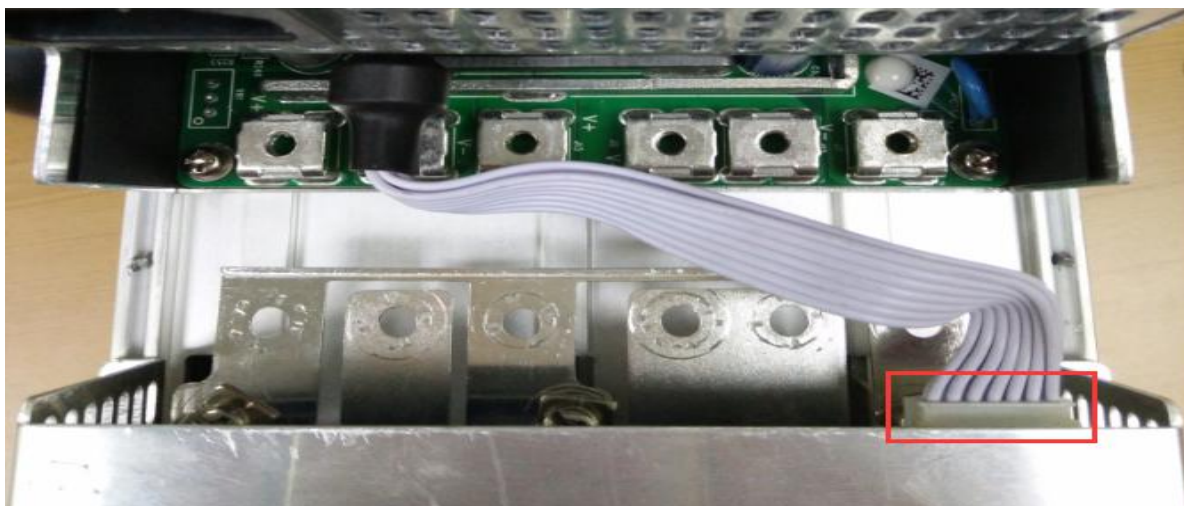


3) Unplug the power control cable on the control panel, remove the power supply, and remove the power supply:




8.2.2. Power Supply Installation


1) First plug the control cable of the power supply into the corresponding slot on the control panel, as shown below:

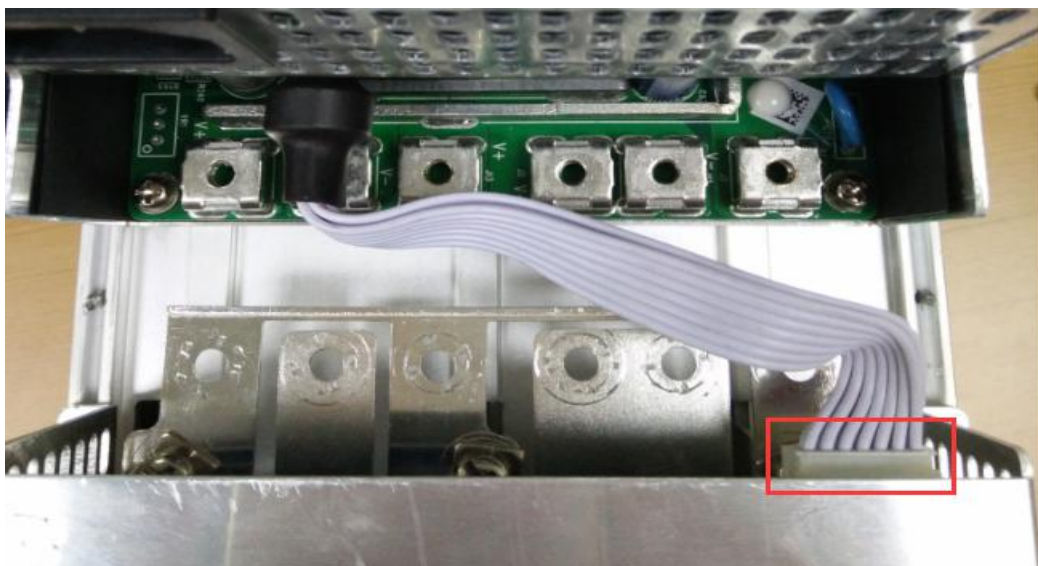

2) Then connect the 6 positive and negative terminals on the power supply to the copper row one by one, and then install 6 screws in turn. The screws should be tightened and the washers should be aligned parallel to the edge of the copper bar to avoid short circuiting the power supply or the power board, as shown below:

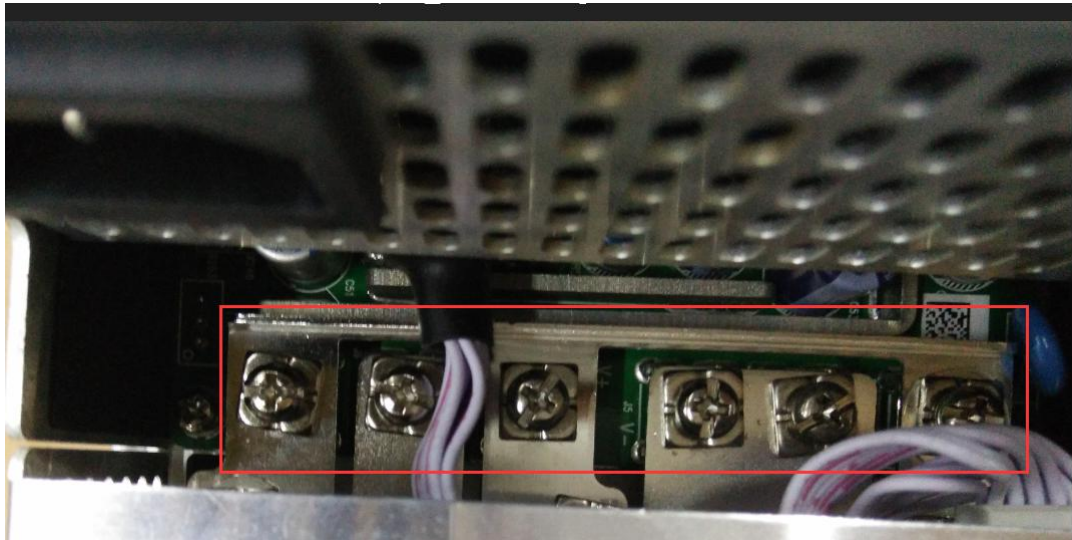


3) Finally, tighten the screws of the four fixed power supplies on the chassis, and the power supply is installed, as shown below:

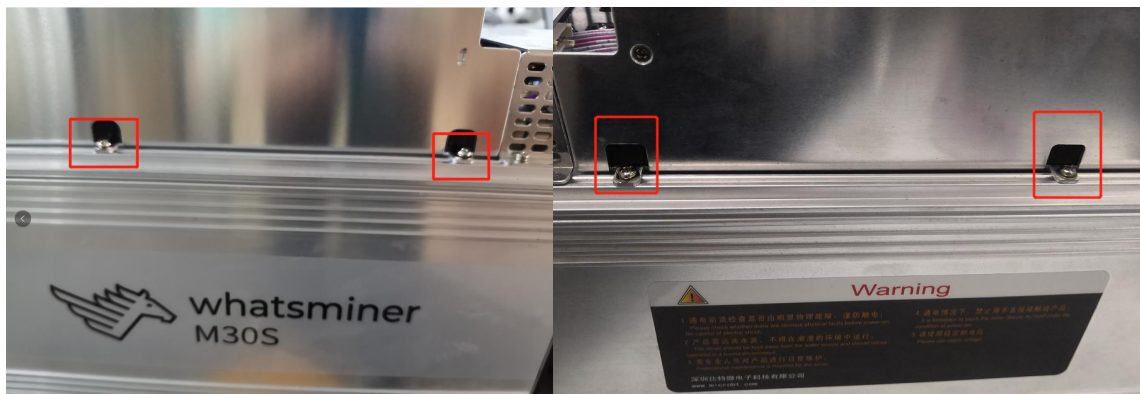


8.3. Hash Board Disassembly and Installation

8.3.1. Hash Board Disassembly


1) There are three hash boards on each mining machine (the order number of the hash board is as shown below). Before removing the board, first remove the control board and the inlet fan, as shown below:

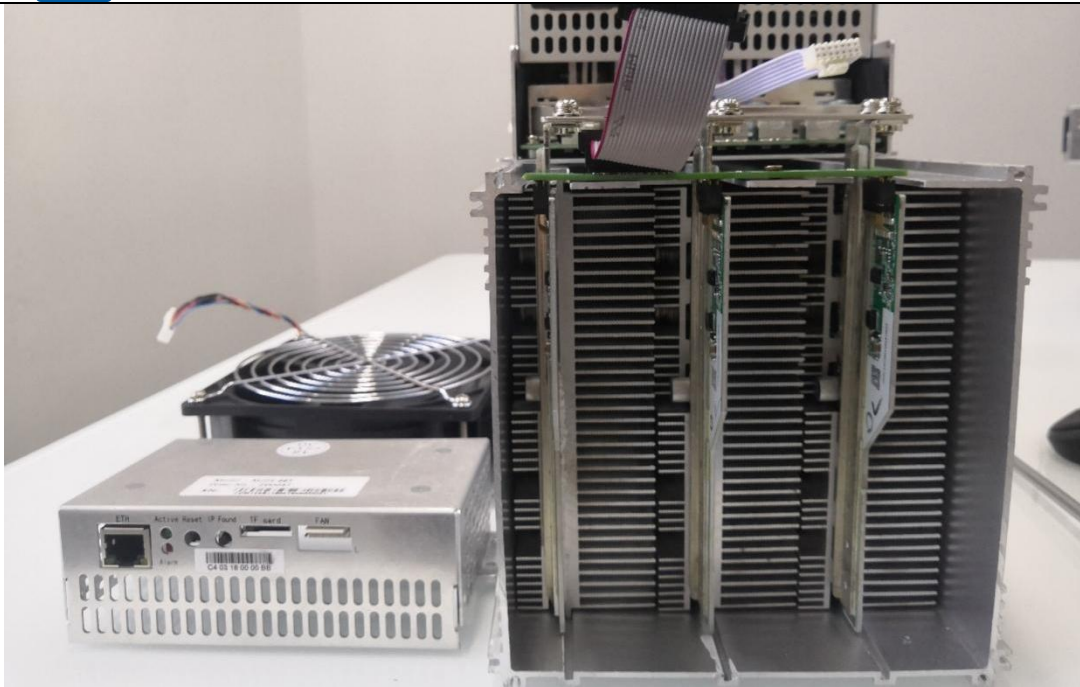

2) Remove the adaptor plate and the copper bar fixed to the control panel as shown:

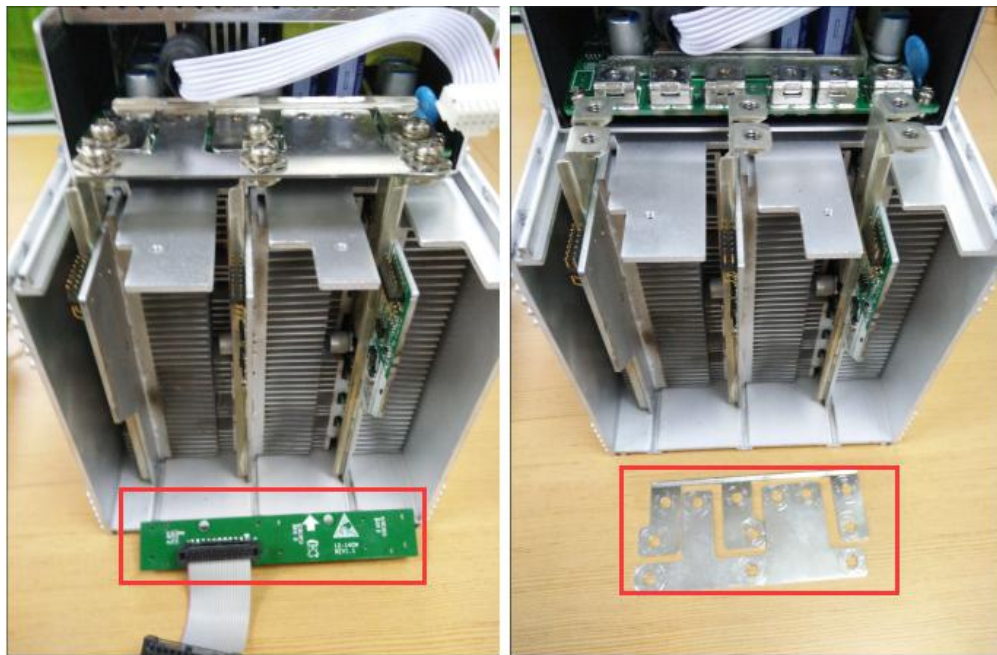

3) Extract the faulty hash board outward, as shown:

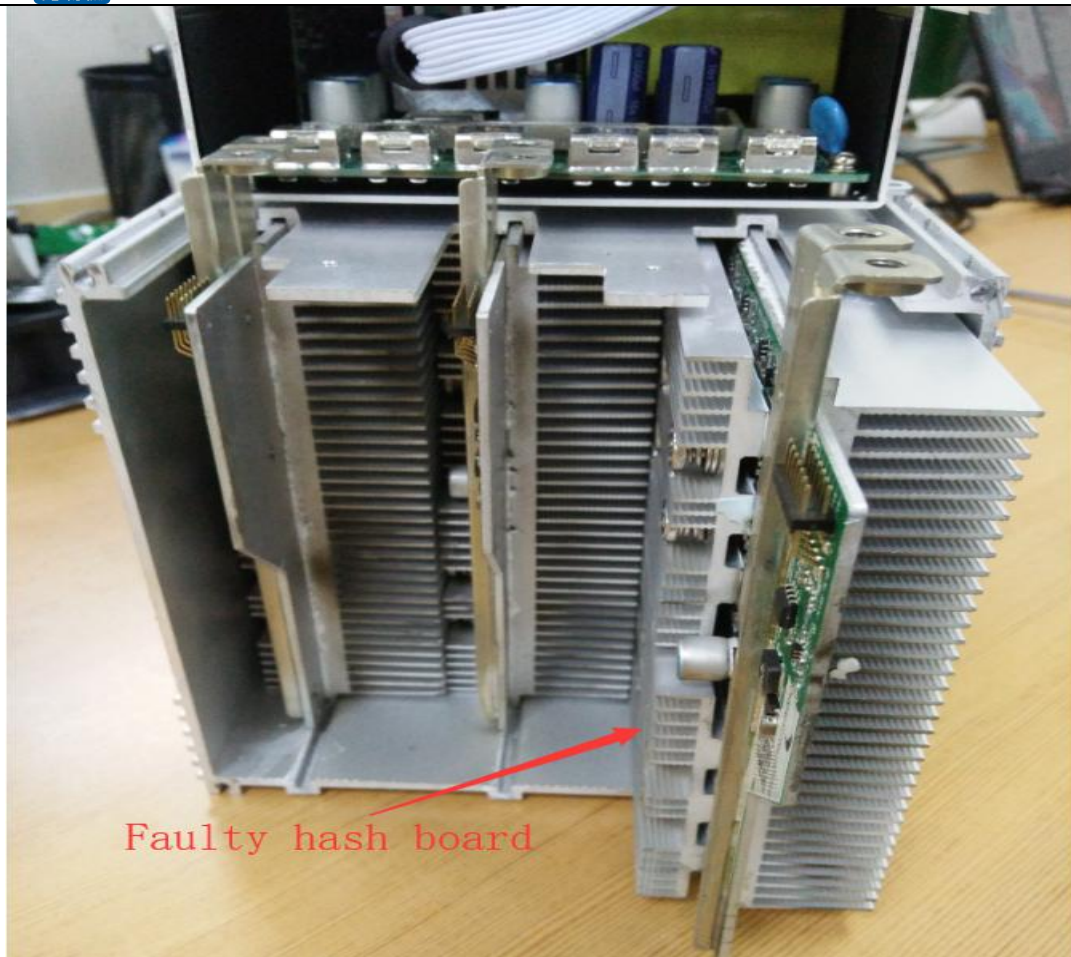

- 4) After taking out the hash board, record the serial number above or use WeChat “scan” to scan the power board serial number and provide it to the relevant after-sales technician, as shown:




8.3.2. Hash Board Installation


1) When the hash board is loaded into the chassis, one hand holds the board into the hash board slot, and sequentially enters the chassis, as shown in the figure:



2) After installing the hash board into the chassis, first install the adaptor board. The socket of the adaptor board and the pin of the hash board must be installed in place to avoid other contact related issues, as shown:

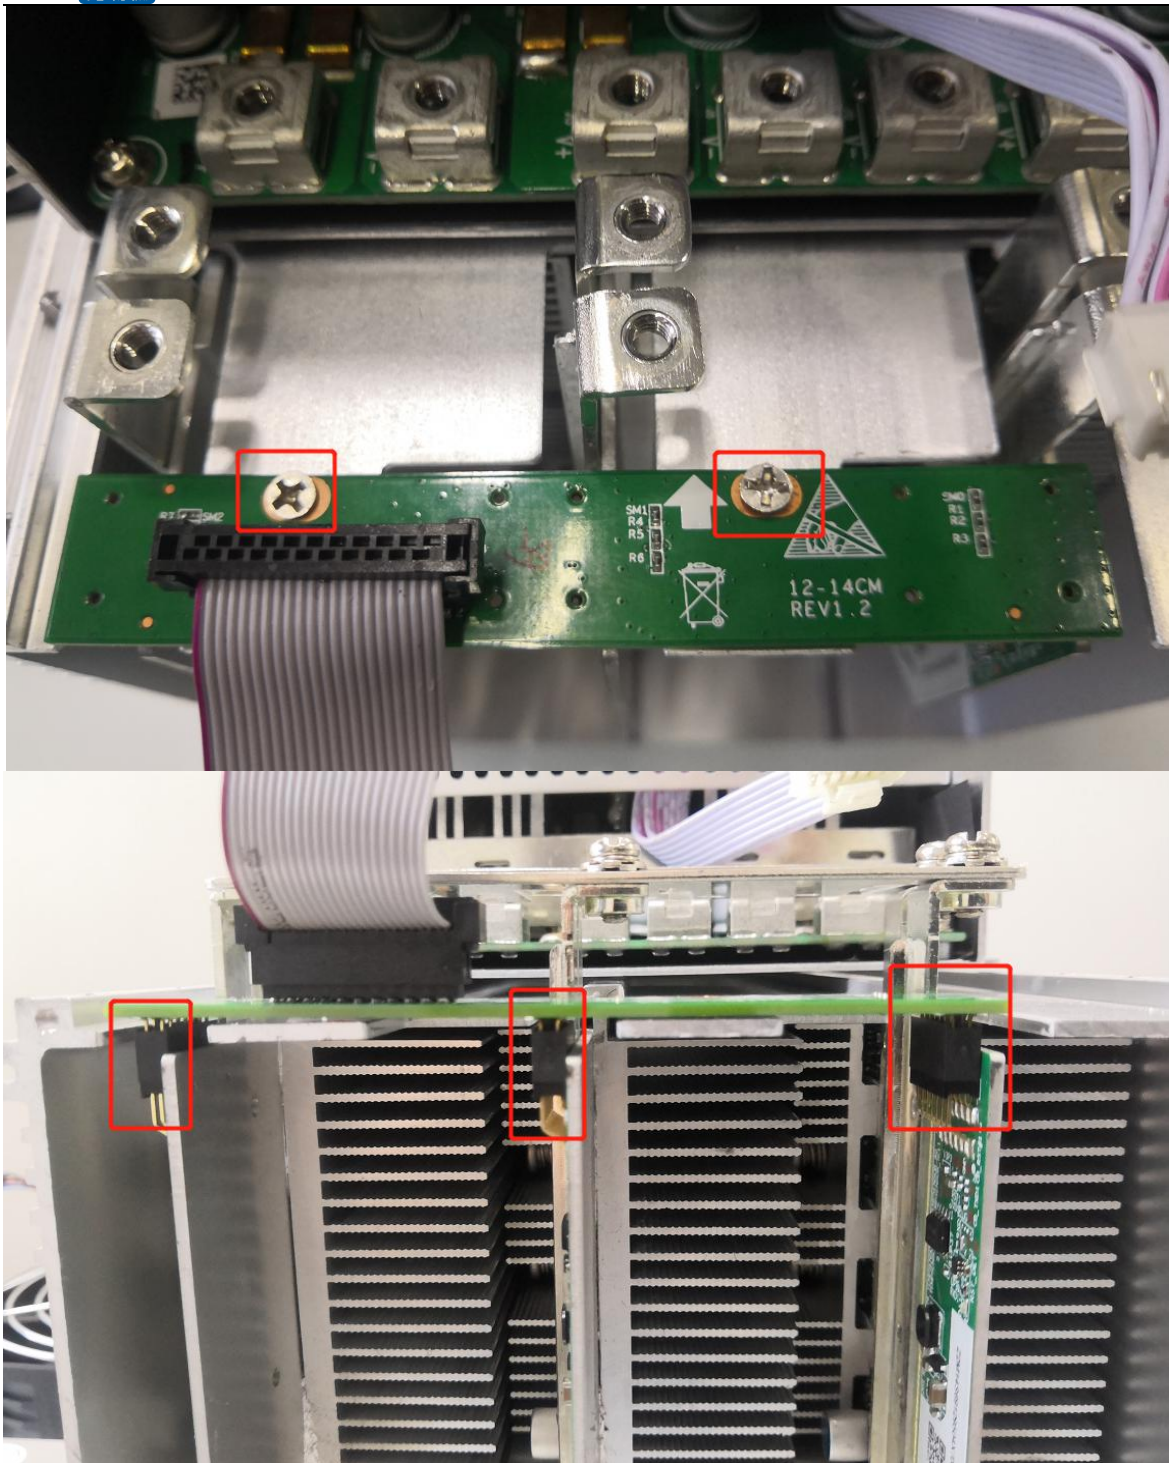

3) After the adaptor plate is installed, install the copper bar. When the power busbar is connected to the hash board, the positive and negative poles of the copper bar cannot be connected incorrectly, and the screw pads of the fixed copper bar must be aligned with the edge of the copper bar, otherwise it may be possible to power on, and the machine will short-circuit. Fixed screws must be tightened to ensure the normal operation of the machine with proper contact with the copper bars, as shown:

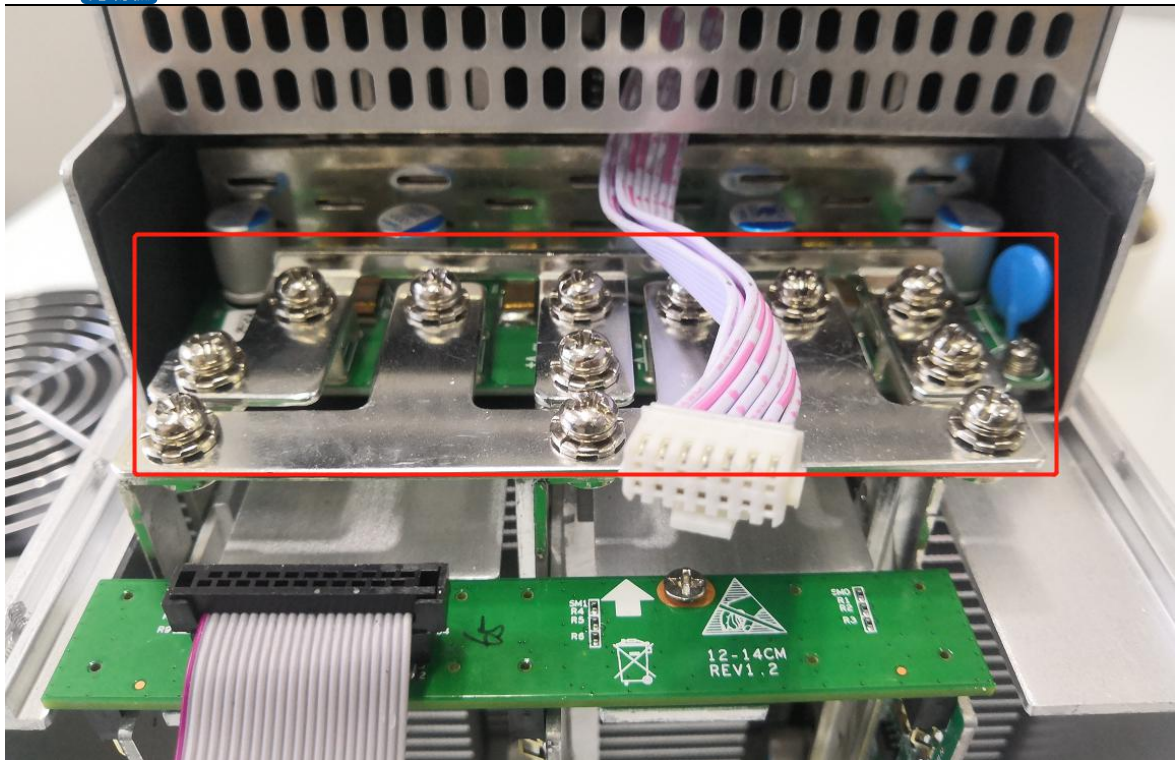

4) After the copper row is installed, the control board and the fan are installed, and the hash board is installed.



Note: The power cord interface needs to be firmly connected to avoid loosening and causing the port to burn out at high temperature!

